



I PORTLUXE

BASESTATION MANUAL


GET TO KNOW LUXE BASESTATION

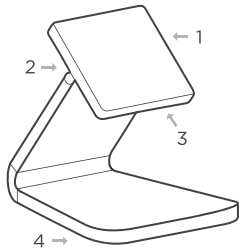

1. Security Lock
2. Articulating Hinge
3. Charge Pins
4. Removable Security Foot
5. Drill Template
6. USB A-USB C Cable
7. USB Power Supply
8. Lock Tool and Screws (4)



BASESTATION SET UP

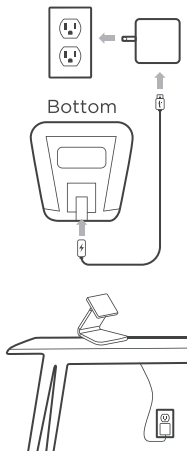

STEP 1


Insert USB cable into bottom of BaseStation and power supply.

Plug power supply into wall.

STEP 2

Power adapter can be ran out the back of the Base or down through the table for a clean hidden cable look using a 5/8" drill bit and the drill template.

NANOPADCARE

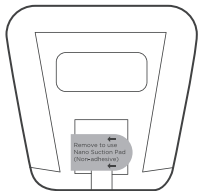

Bottom



STEP 3


Remove plastic covering on the NanoPad before placing on the table.

STEP 4

Clean table with provided alcohol pad and ensure surface is dry before placing BaseStation.

If NanoPad loses its suction, clean NanoPad with a damp cloth.

ATTACH CASE TO BASESTATION

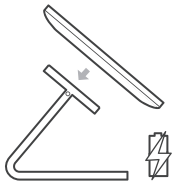

STEP 5

Ensure the Case is properly seated for secure mounting and charging.

Charging begins immediately.

Attach Case in portrait or landscape orientation.


To remove, pull from either left or right side.

BASESTATION SECURITY MOUNTING OPTIONS

The Luxe Case can be securely fastened to the BaseStation for permanent installation. The ability to articulate the viewing angle is maintained, even while secured. The BaseStation can be securely mounted to a desk, wall or VESA via MIS-D, 75 standards.

REMOVING SECURITY FOOT

Bottom

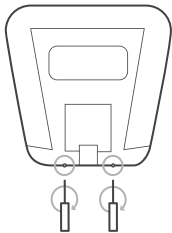


STEP 1

Use the provided lock tool to turn both security screws **CLOCKWISE** until full stop,




SCREW SECURITY FOOT TO TABLE

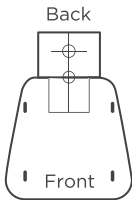

Use alignment target to help center the BaseStation. Use provided screws to secure Security Foot to table.


If routing cable into table:

Insert drill template onto BaseStation foot. Then mark and drill 5/8" cable hole.

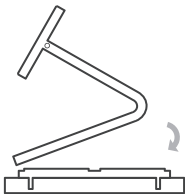

Attach the FRONT of the BaseStation first, then set flat on the foot.

SECURE BASESTATION TO SECURITY FOOT

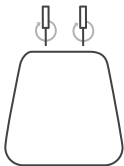


Use the provided tool to turn both security screws **COUNTERCLOCKWISE** until full stop.


Place the Case back on the BaseStation in the desired orientation.



LOCK THE LUXE CASE TO THE BASESTATION

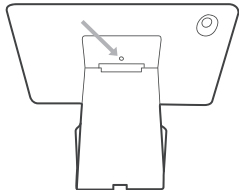

Use the provided tool to turn security screw
COUNTERCLOCKWISE
until stop.

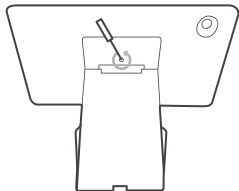

The Case will remain
locked to the BaseStation.
To unlock the Case, turn the
security screw **CLOCKWISE**
and remove the Case.

I PORT

For more help and info please visit:
iportproducts.com/luxe

iPort

991 Calle Amanecer

San Clemente, CA 92673

United States of America

Phone: **+1.949.492.7777**

Email: contact@iportproducts.com

Web: www.iportproducts.com



I PORT



CAUTION

This product contains magnets. Do not place in direct proximity with magnetically sensitive objects such as credit cards or exposed hard drives. Persons with pace makers are not recommended to use this products

Use Products as directed.
Unspecified use could result in injury.

Warranty can be found at
iportproducts.com/warranty

I P O R T

Apple, iPad, iPad Air, iPad Pro and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

I P O R T

336-0023 REV B